

# *Addendum to La Spaziale S1 Instruction Manual*

## **Boiler Button Programming Options**

**BOLD** = Lamps, **Reverse** = Buttons

On the 20Amp models of the La Spaziale S1, the **Boiler** button performs two roles:

1. Turning the Steam boiler on and off
2. Entry and exit of Economy mode

The operations of the **Boiler** button are both incorrectly documented and under documented in the Instruction Manual currently included with the S1.

There are three possible operational modes of the two boilers in the La Spaziale S1 20A model:

1. Both boilers are completely independent, turning on and off according to the needs of each. Both can be on at the same time. This is the default mode.
2. The **Boiler** button can toggle the Boiler on and off. This mode is useful for those that only drink espresso and do not need steam or hot water and want to conserve energy.
3. The **Boiler** button can also be used to switch in and out of Economy mode. In this mode only one boiler can be on at a time. The S1 automatically controls which is on according to demand with preference going to the group boiler. This is useful for those owning the 20A model but lacking a 20A circuit.

### **Turning the Steam/Hot Water Boiler On and Off**

1. The S1 must be in On mode, not Standby for all operations below.
2. Momentarily press the **Boiler** button
3. The **Boiler** lamp is extinguished. No steam or hot water is available.  
Note: if you turn the S1 Off then On again, or if power is removed and restored to the S1, the Boiler remains Off until you perform step 4, below.
4. Momentarily press the **Boiler** button again.
5. The **Boiler** lamp is on (or blinking). Steam and hot water are available.

### **Turning Economy Mode On and Off**

1. The S1 must be in On mode, not Standby for all operations below.
2. Press the **Boiler** button for 10 seconds until the **ECON** lamp illuminates. Economy mode is now active.  
Note: if you turn the S1 Off and On again or if power is removed and restored to the S1, Economy mode remains active until you perform step 4, below.
3. While in Economy mode you can momentarily press the **Boiler** button to completely turn off the boiler. Another momentary press returns you to Economy mode.
4. To exit Economy mode, press and hold the **Boiler** button for 10 seconds until the **ECON** lamp is extinguished.